



Bar Graph & Meter

Website: <http://www.we-con.com.cn/en>

Technical Support: support@we-con.com.cn

Skype: fcwkkj

Phone: 86-591-87868869

QQ: 1043098682

Technical forum: <http://wecon.freeforums.net/>



1. General

This document shows the basic functions of bar graph and meter. Those two objects use the same read address and data range. They display the same data in the bar graph and meter.

2. Bar Graph Setting

1) Read address

Set read address to get value for Bar graph;

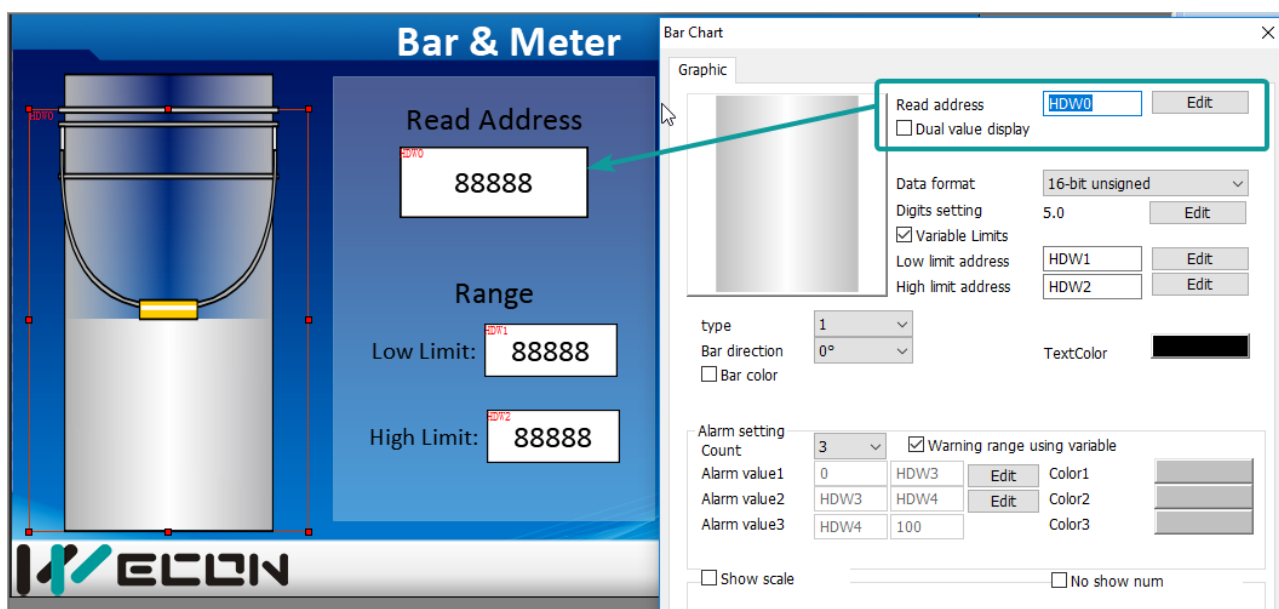


Figure 1

2) Variable Limits

The display range for bar graph could be fix value or variable, if select variable, please set the low and high limit address as Figure 2 shows.

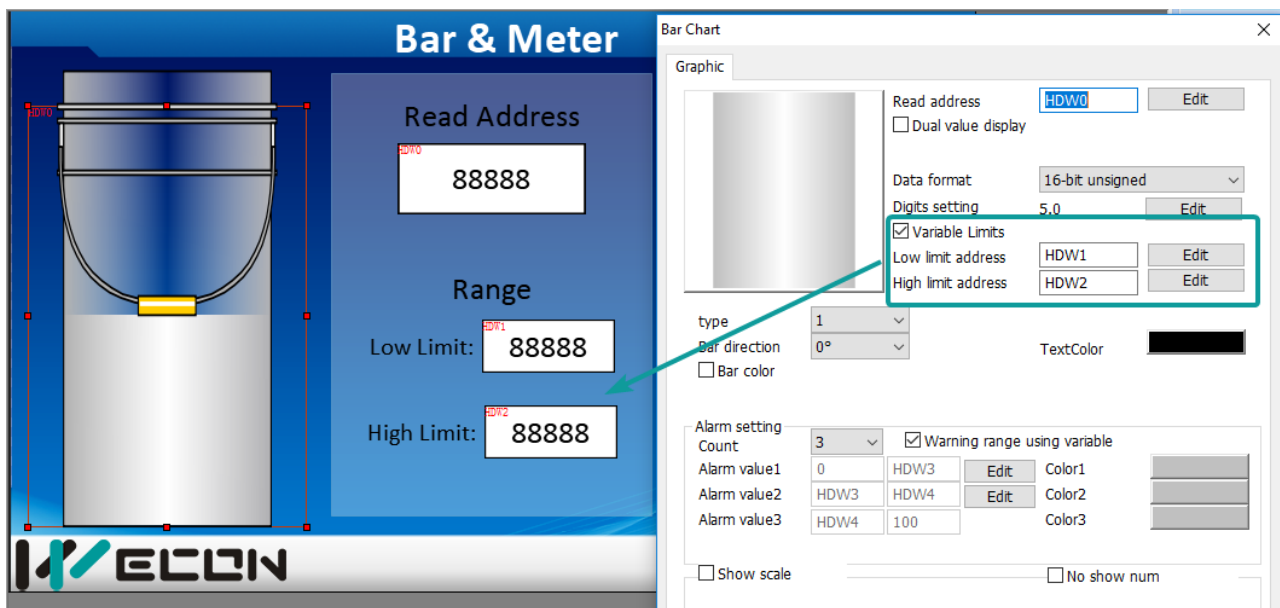


Figure 2

3. Meter Settings

1) Read address

Set read address to get value for meter;

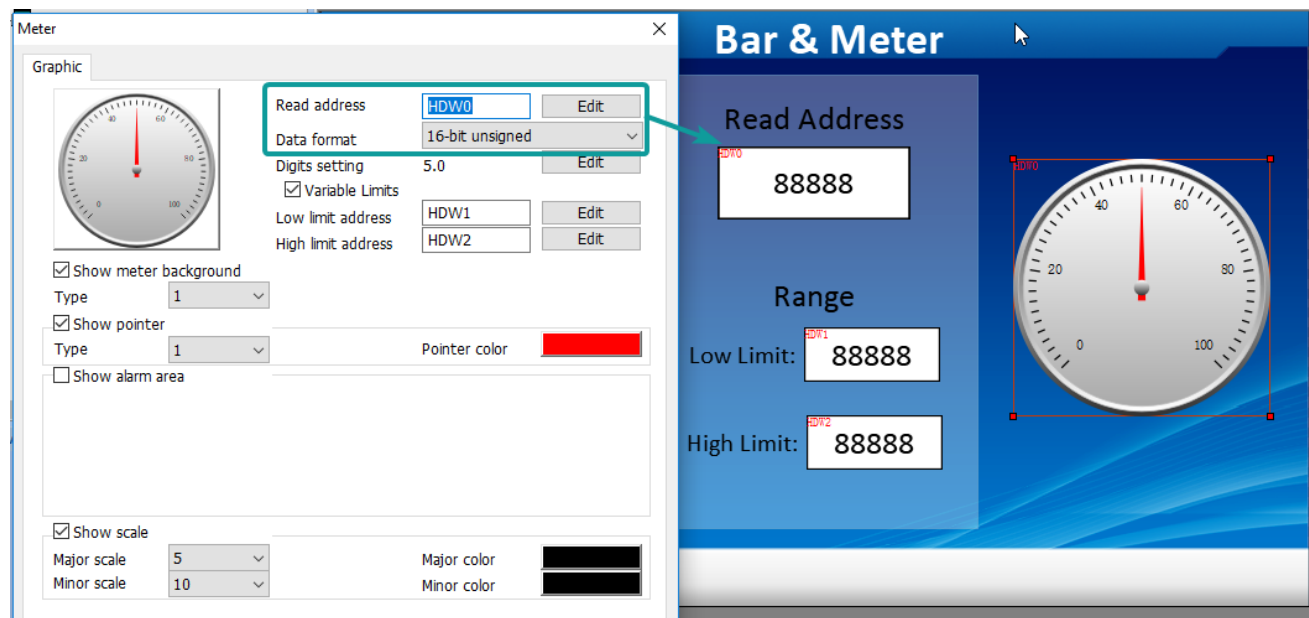


Figure 3

2) Variable Limits

The limit for meter could be fix value or variable, if select variable, please set the low and high limit address as Figure 4 shows.

